



OVERJOHN CABINET

Assembly Instructions

NOTICE

IMPORTANT! Assemble cabinet on a protected surface to avoid scratching the finish.

TOOLS & SUPPLIES


- Phillips Screwdriver/Drill with Phillips Tip
- Rubber Mallet
- Nail Gun with 1-1/2" Brad Nails **OR** Wood Glue

CABINET PARTS

PART # - DESCRIPTION	PART # - DESCRIPTION
A - Face Frame with Door(s) & Hinges Attached	D - Back Panel
B - Side Panel	E - Adjustable Shelf
C - Top/Middle/Bottom Panels	




STEP 1: Place face frame with door side down on protected work surface. Attach brackets to back of face frame with 9/16" Round Head screws.

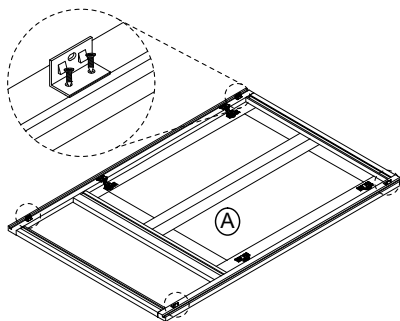


STEP 2: Attach side panels to face frame by lowering side panel brackets over face frame brackets. Insert 9/16" Round Head screw through hole in each bracket to secure.


Tip: You can use a rubber mallet to gently tap brackets and panels into place when needed during assembly.

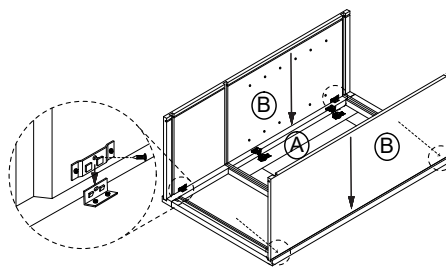


STEP 3: Insert male brackets into female brackets on top and bottom panels, but **DO NOT** screw into place yet. Slide top and bottom panels into grooves on side panels and face frame.

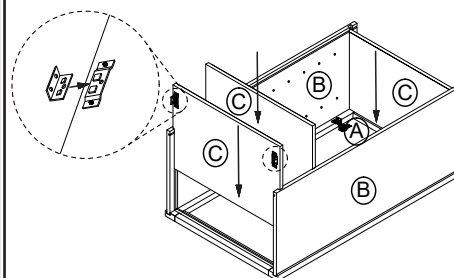



STEP 4: Attach brackets on top and bottom panels to side panels with 9/16" Round Head screws (like Step 1).

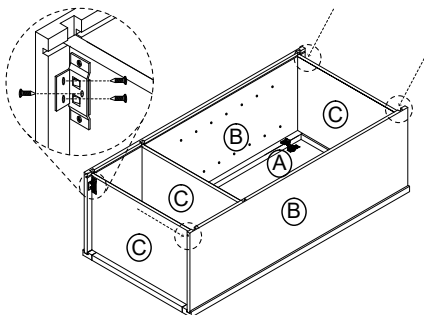


STEP 5: Insert back panel into grooves on side panels and slide into place.

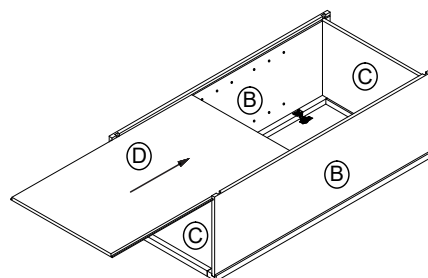

STEP 6: Use 1" flat head screws to secure back panel to top and bottom panels.

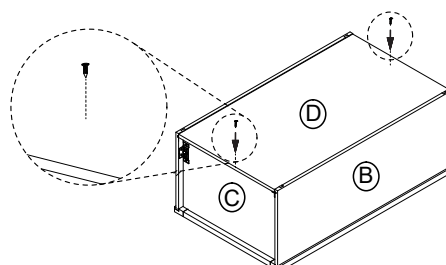

STEP 7: Stand cabinet up. Insert shelf clips into holes on cabinet side panels. Install shelves.

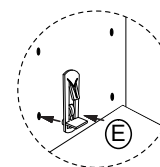



OVERJOHN CABINET

Assembly Instructions



Door
Hinges



Door/Drawer
Bumpers

STEP 8: Adjust door spacing as needed using screws on 6-way adjustable door hinges. Add bumpers to doors.

