



EASY REACH BASE CORNER CABINET

Assembly Instructions

NOTICE

IMPORTANT! Assemble cabinet on a protected surface to avoid scratching the finish.

TOOLS & SUPPLIES


- Phillips Screwdriver/Drill with Phillips Tip
- Rubber Mallet
- Nail Gun with 1-1/2" Brad Nails **OR** Wood Glue

CABINET PARTS

PART # - DESCRIPTION	PART # - DESCRIPTION
A - Face Frame	F - Toe Kick
B - Bottom Panel	G - Door
C - Side Front Panel	H - Shelf
D - Side Back Panel	I - Wooden Brace
E - Back Panel	




STEP 1: Place face frame pieces (A1, A2) on protected work surface. Secure face frame sections together using 1" Flat Head screws. Set face frame aside.

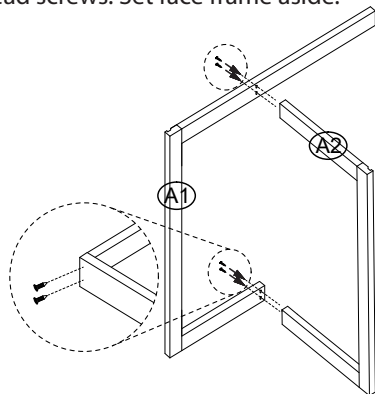


STEP 2: Place bottom panel (B) on protected work surface with brackets facing up. Insert male bracket into each female bracket and secure with 9/16" Round Head screw. Set bottom panel aside.


Tip: You can use a rubber mallet to gently tap brackets and panels into place when needed during assembly.

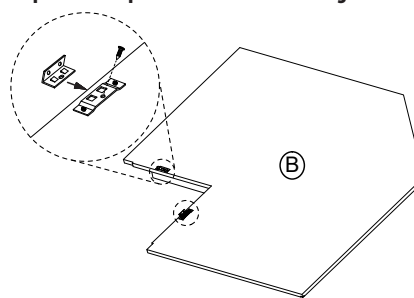


STEP 3: Place side front panels (C1, C2) on protected work surface with brackets facing up. Insert male bracket into each female bracket and secure with 9/16" Round Head screw. Set right front side panel aside (C2).

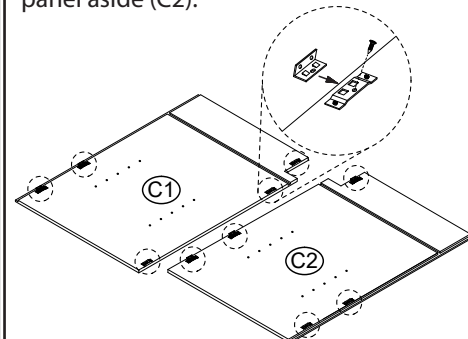


STEP 4: Attach male brackets on left side front panel (C1) to face frame (A) with 9/16" Round Head screws.

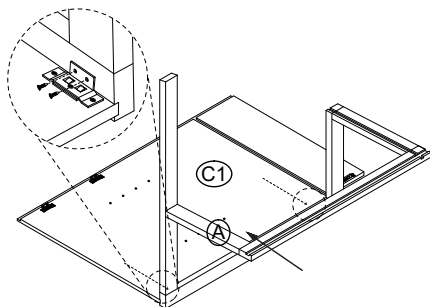


STEP 5: Insert bottom panel (B) into groove on side front panel (C1). Ensure brackets are facing the underside of the cabinet. Attach male brackets on the bottom panel (B) to face frame (A) with 9/16" Round Head screws.

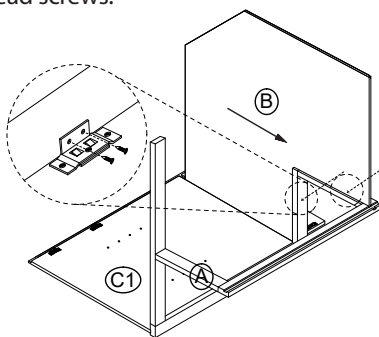

STEP 6: Set left side back panel (D1) in place, then attach using male brackets on side front panel (C1) and 9/16" Round Head screws.

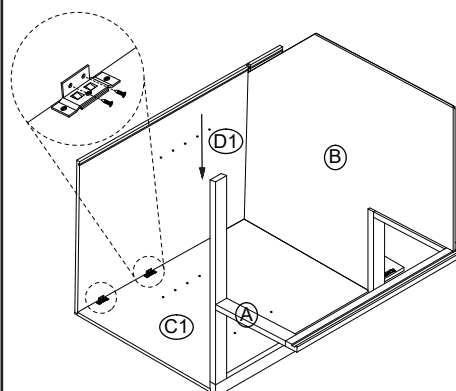

STEP 7: Set right side front panel (C2) in place. Attach male brackets to face frame (A) with 9/16" Round Head screws.

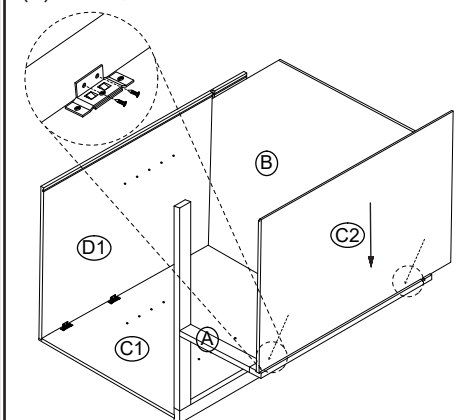

CONTINUED ON NEXT PAGE




EASY REACH BASE CORNER CABINET


Assembly Instructions

 9/16" Round Head Screw |  Male/Female Brackets

STEP 8: Set right side back panel (D2) in place, then attach using male brackets on side front panel (C2) and 9/16" Round Head screws.

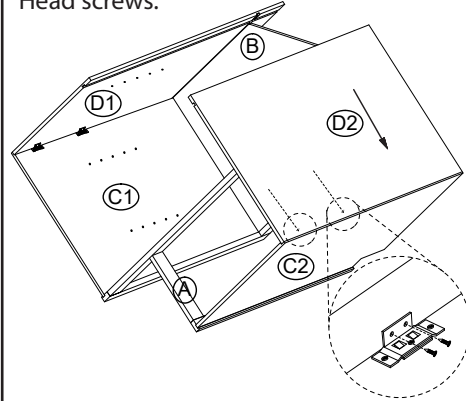


STEP 9: Slide back panel (E) into place carefully lifting the side back panels (D1, D2) for clearance if needed. Gently tap the back panel (E) and side back panels (D1, D2) securely into place with a rubber mallet.

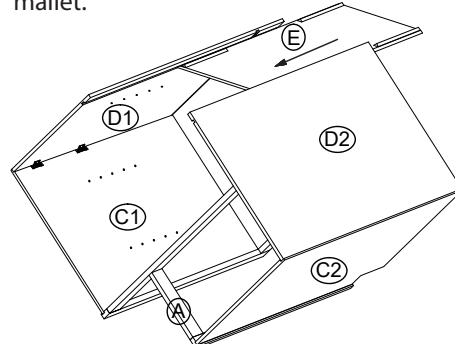


 1" Flat Head Screw |

STEP 10: Use 1" flat head screws to secure side back panels (D1, D2) to bottom panel (B). Make sure you are inserting screws in line with the grooves for appropriate placement.

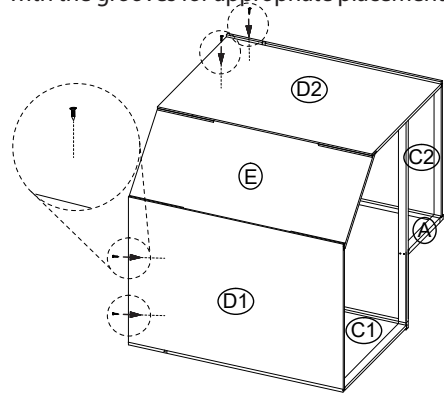


 1" Flat Head Screw |

STEP 11: Use 1" flat head screws to secure side back panels (D1, D2) to back panel (E). Make sure you are inserting screws in line with the support blocks for appropriate placement.

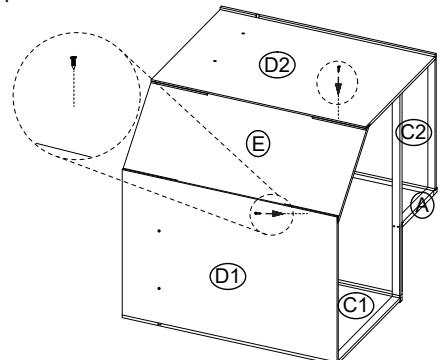


 1" Flat Head Screw |

STEP 12: Use 1" flat head screws to secure side back panel (D2) to extended face frame support (A).

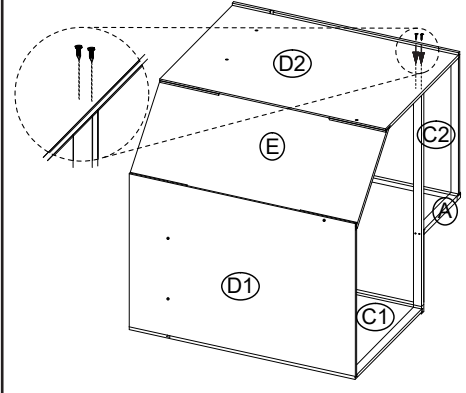


 9/16" Round Head Screw |  Male/Female Brackets

STEP 13: Assemble toe kick sections (F1, F2) using male/female bracket and 9/16" Round Head screws.

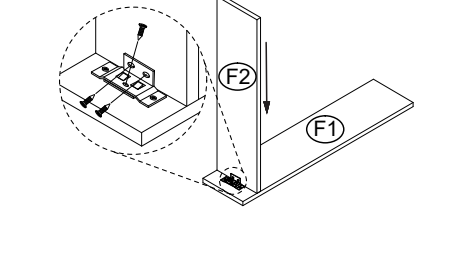

 9/16" Round Head Screw |  Male/Female Brackets


STEP 14: Attach toe kick (F1, F2) to male brackets on side front panels (C1, C2) with 9/16" Round Head screws. Stand cabinet up.

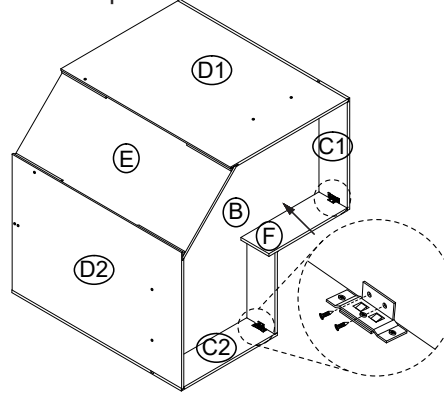

 5/8" Flat Head Screw |  Door-to-Frame Hinge

STEP 15: Install door-to-frame hinges on the inner cabinet door (G1) using 5/8" Flat Head screws. Then attach door to the face frame (A) using 5/8" Flat Head screws.

Tip: Door is reversible and can be installed to open left or right.

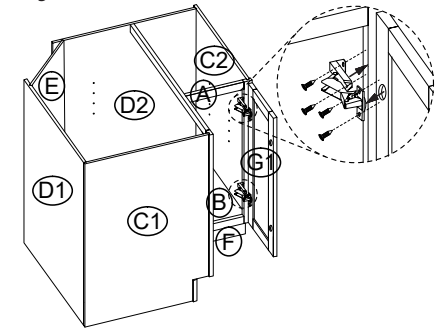



EASY REACH BASE CORNER CABINET

Assembly Instructions

5/8" Flat Head Screw Door-to-Door Hinge STEP 16: Install door-to-door hinges on the inner cabinet door (G1) using 5/8" Flat Head screws. Then attach the outer door (G2) to the inner door (G1) using 5/8" Flat Head screws.	Shelf Clips STEP 17: Insert shelf clips into holes on cabinet front side panels (C1, C2) and back side panels (D1, D2).	STEP 18: Install shelf (H).	9/16" Round Head Screw Corner Blocks STEP 19: Attach corner blocks at top of cabinet with 9/16" Round Head screws.
1" Flat Head Screw STEP 20: Attach wooden brace (I) at rear top of cabinet with 1" Flat Head screws.	Door Hinges Door Bumpers STEP 21: Adjust door spacing as needed using screws on adjustable door hinges. Add bumpers to doors.		