



LAZY SUSAN BASE CABINET

Assembly Instructions

NOTICE

IMPORTANT! Assemble cabinet on a protected surface to avoid scratching the finish.

TOOLS & SUPPLIES


- Phillips Screwdriver/Drill with Phillips Tip
- Rubber Mallet
- Nail Gun with 1-1/2" Brad Nails **OR** Wood Glue

CABINET PARTS

PART # - DESCRIPTION	PART # - DESCRIPTION
A - Face Frame	F - Toe Kick
B - Bottom Panel	G - Turntable Shelf
C - Side Front Panel	H - Door
D - Side Back Panel	I - Wooden Brace
E - Back Panel	




STEP 1: Place face frame pieces (A1, A2) on protected work surface. Secure face frame sections together using 1" Flat Head screws. Set face frame aside.

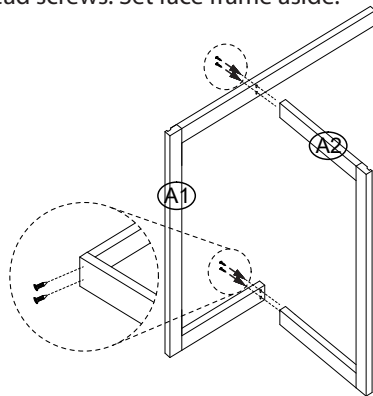


STEP 2: Place bottom panel (B) on protected work surface with brackets facing up. Insert male bracket into each female bracket and secure with 9/16" Round Head screw. Set bottom panel aside.


Tip: You can use a rubber mallet to gently tap brackets and panels into place when needed during assembly.

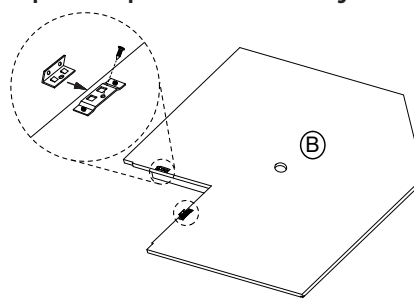


STEP 3: Place side front panels (C1, C2) on protected work surface with brackets facing up. Insert male bracket into each female bracket (except in the middle of panel C2) and secure with 9/16" Round Head screw. Set right front side panel aside (C2).

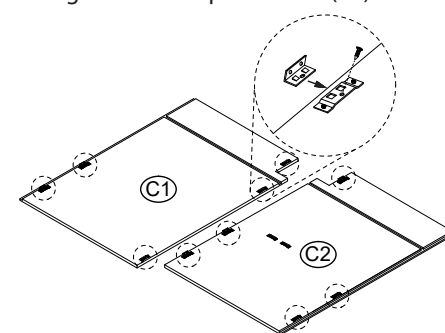


STEP 4: Attach male brackets on left side front panel (C1) to face frame (A) with 9/16" Round Head screws.

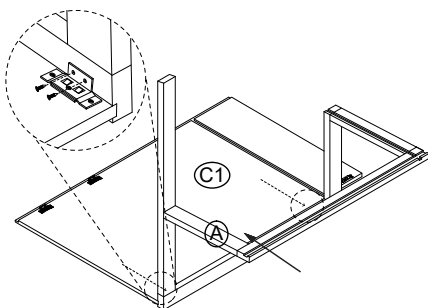


STEP 5: Insert bottom panel (B) into groove on side front panel (C1). Ensure brackets are facing the underside of the cabinet. Attach male brackets on the bottom panel (B) to face frame (A) with 9/16" Round Head screws.

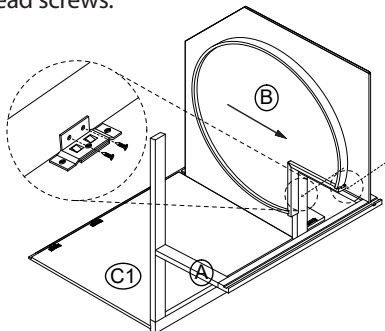

STEP 6: Set left side back panel (D1) in place, then attach using male brackets on side front panel (C1) and 9/16" Round Head screws.

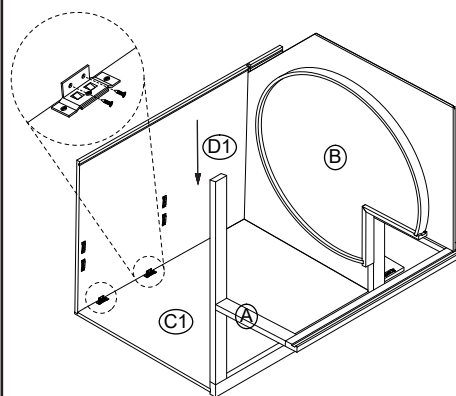

STEP 7: Set right side front panel (C2) in place. Attach male brackets to face frame (A) with 9/16" Round Head screws.








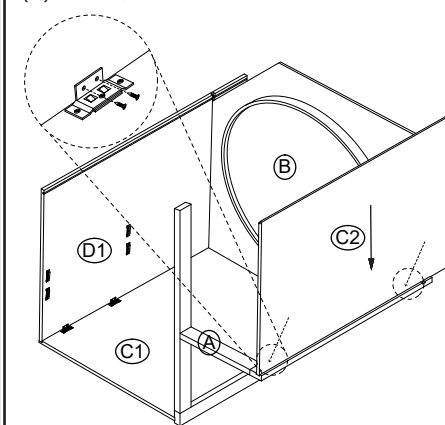


CONTINUED ON NEXT PAGE



LAZY SUSAN BASE CABINET

Assembly Instructions

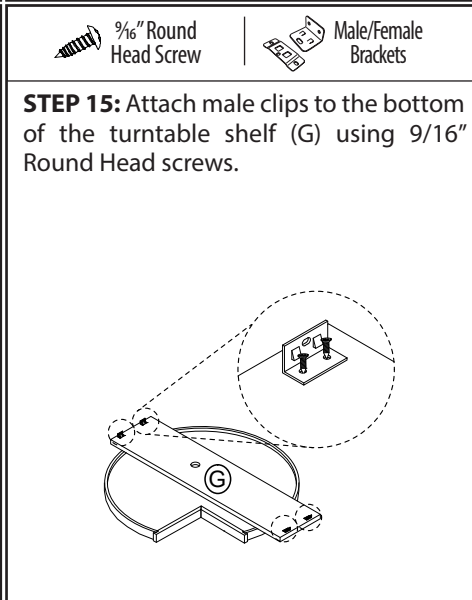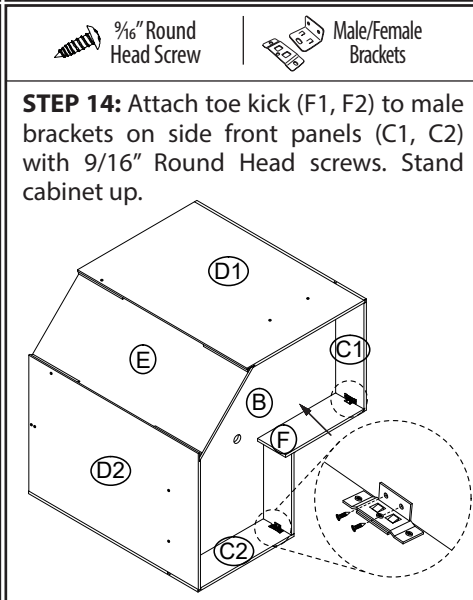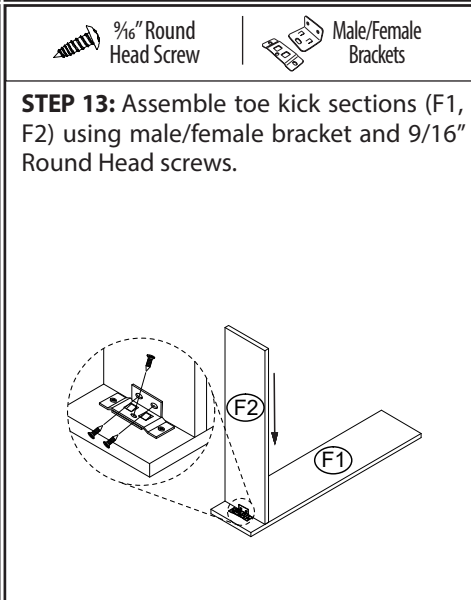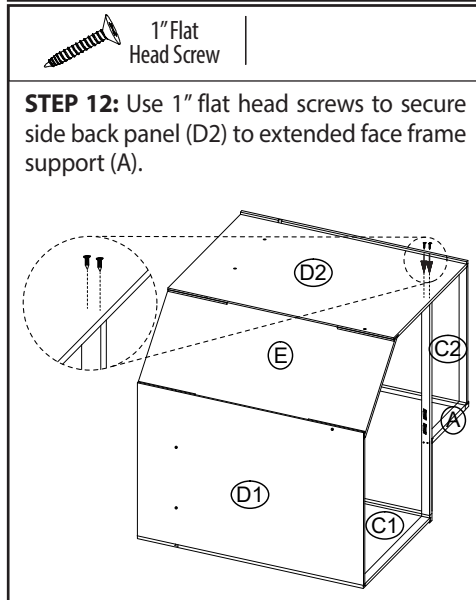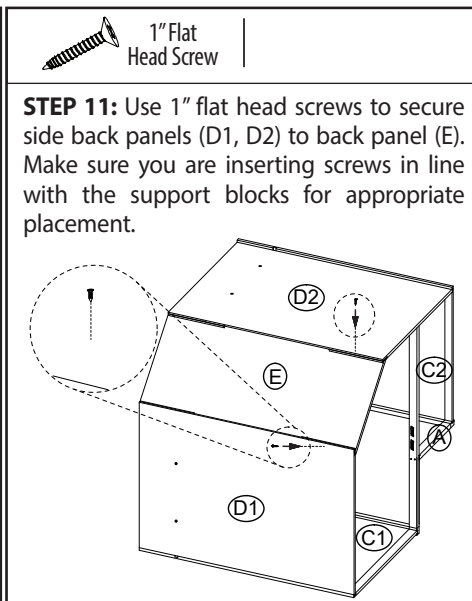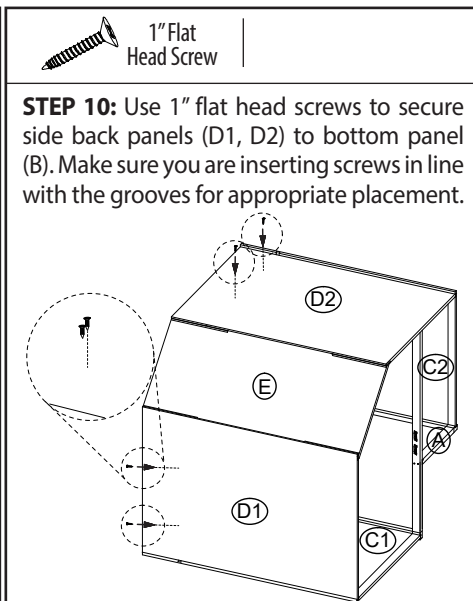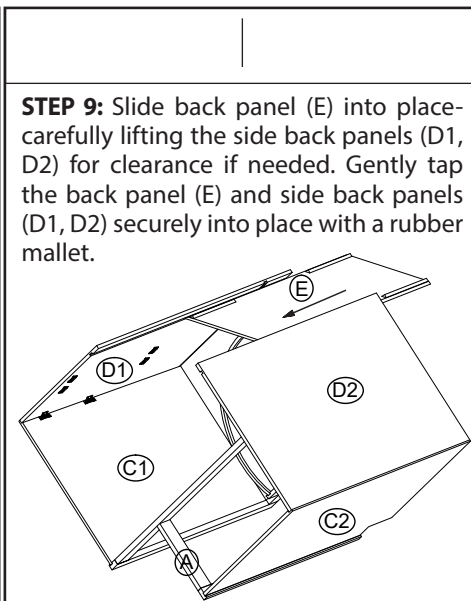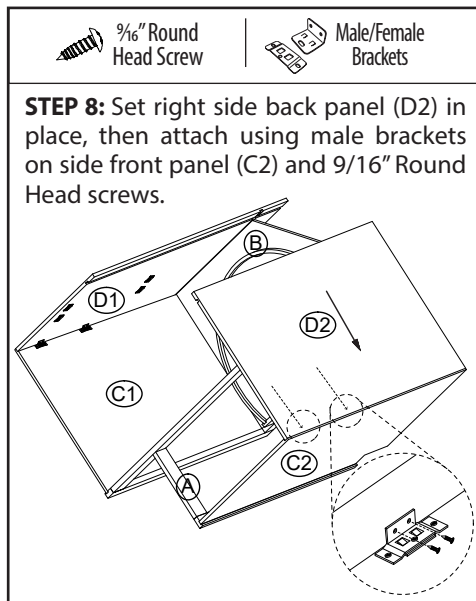



LAZY SUSAN BASE CABINET

Assembly Instructions

9/16" Round Head Screw Male/Female Brackets STEP 16: Insert male brackets on the bottom of the turntable shelf (G) into female brackets on the side front panel (C2) and side back panel (D1). Secure with 9/16" Round Head screws. Tip: For easier installation, loosen the female brackets on panels C2 and D1 before inserting the turntable shelf (G). Re-tighten brackets after shelf installation.	5/8" Flat Head Screw Door-to-Frame Hinge STEP 17: Install door-to-frame hinges on the inner cabinet door (H1) using 5/8" Flat Head screws. Then attach door to the face frame (A) using 5/8" Flat Head screws. Tip: Door is reversible and can be installed to open left or right.	5/8" Flat Head Screw Door-to-Door Hinge STEP 18: Install door-to-door hinges on the inner cabinet door (H1) using 5/8" Flat Head screws. Then attach the outer door (H2) to the inner door (H1) using 5/8" Flat Head screws.	9/16" Round Head Screw Corner Blocks STEP 19: Attach corner blocks at top of cabinet with 9/16" Round Head screws.
9/16" Round Head Screw Male/Female Brackets STEP 20: Attach male clips to the bottom of the wooden brace (I) using 9/16" Round Head screws.	9/16" Round Head Screw Male/Female Brackets STEP 21: Insert male brackets on the bottom of the wooden brace (I) into female brackets on the extended face frame support (A) and side back panel (D1). Secure with 9/16" Round Head screws.	Door Hinges Door Bumpers STEP 22: Adjust door spacing as needed using screws on adjustable door hinges. Add bumpers to doors.	