



WALL DRAWER BASE CABINET

Assembly Instructions

NOTICE

IMPORTANT! Assemble cabinet on a protected surface to avoid scratching the finish.

TOOLS & SUPPLIES

- Phillips Screwdriver/Drill with Phillips Tip
- Rubber Mallet
- Nail Gun with 1-1/2" Brad Nails **OR** Wood Glue


CABINET PARTS

PART # - DESCRIPTION	PART # - DESCRIPTION
A - Face Frame	C - Top/Bottom Panel
B - Side Panel	D - Back Panel

W-Z - Drawer Parts (See Page 3)




STEP 1: Place face frame with front side down on protected work surface. Attach brackets to back of face frame with 9/16" Round Head screws.

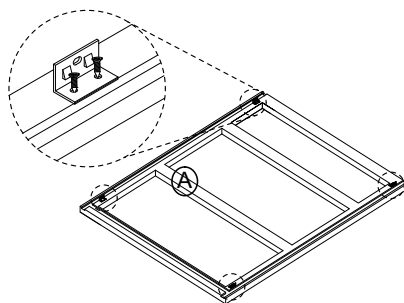


STEP 2: Attach side panels to face frame by lowering side panel brackets over face frame brackets. Insert 9/16" Round Head screw through hole in each bracket to secure.


Tip: You can use a rubber mallet to gently tap brackets and panels into place when needed during assembly.

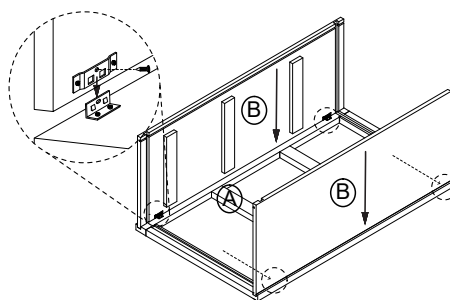


STEP 3: Insert male brackets into female brackets on top and bottom panels, but **DO NOT** screw into place yet. Slide top and bottom panels into grooves on side panels and face frame.

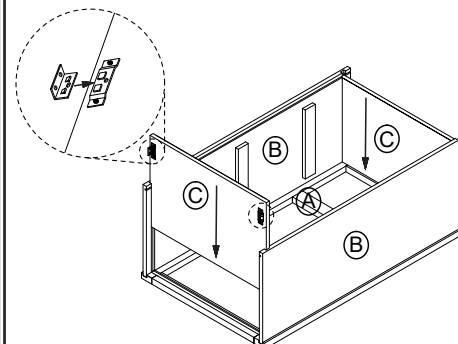


STEP 4: Attach brackets on top and bottom panels to side panels with 9/16" Round Head screws (like Step 1).

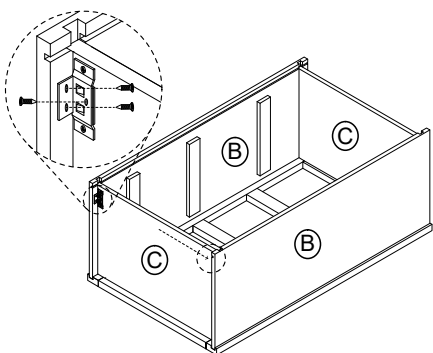


STEP 5: Insert back panel into grooves on side panels and slide into place.

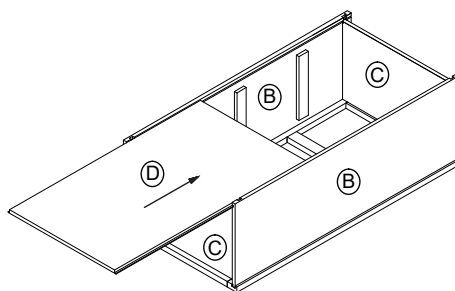

STEP 6: Use 1" flat head screws to secure back panel to top and bottom panels.

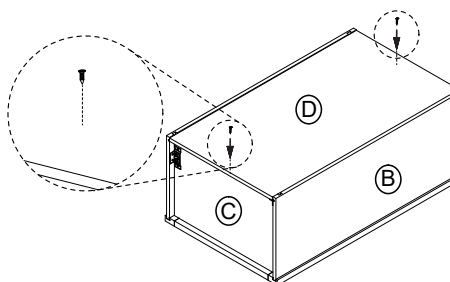





STEP 7: Stand cabinet up. Install drawer glides onto cabinet sides with 5/8" Flat Head screws.

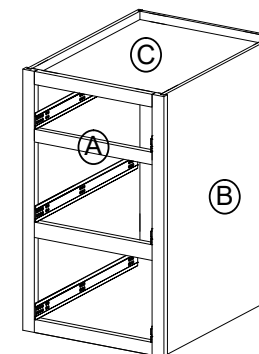



WALL DRAWER BASE CABINET



Assembly Instructions

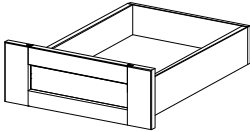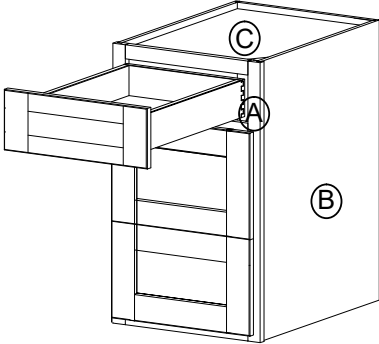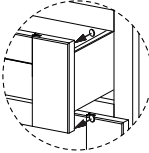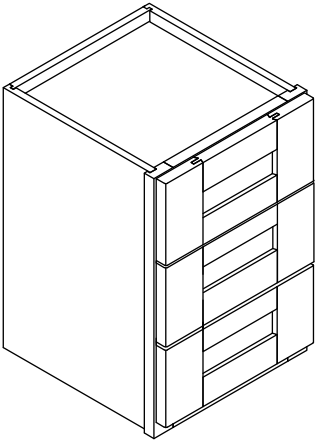STEP 8: Assemble the drawers following the Drawer Box Assembly Instructions (Page 3). 	 5/8" Flat Head Screw  Drawer Glides STEP 9: Attach drawer glides to sides of drawers with 5/8" Flat Head screws. Then slide drawers into place. 	 Drawer Bumpers STEP 10: Add bumpers to drawers. 	



WALL DRAWER BASE CABINET - DRAWER BOX

Assembly Instructions

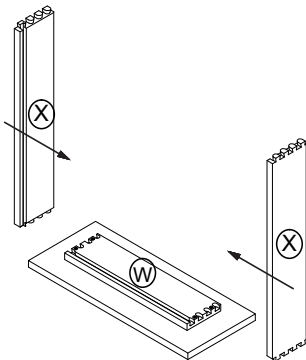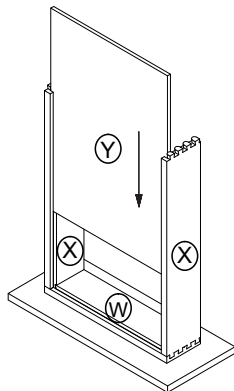DRAWER PARTS		IMPORTANT! Brad nails and/or wood glue should be used in dovetail joints for drawer stability and durability. If Using Wood Glue: Apply glue to dovetail joints before attaching drawer box sides to the drawer front (Step 1), and before attaching the drawer back (Step 3). Wipe away excess after joining. If Using Brad Nails: After completing Step 3, insert at least two Brad Nails into each dovetail joint.	
PART # - DESCRIPTION			
W - Drawer Front & Drawer Box Front			
X - Drawer Box Side			
Y - Drawer Box Bottom			
Z - Drawer Box Back			
		NOTE: Some drawer variation exists between different Walnut Ridge collections. See notes below if you are assembling any of these cabinet or vanity styles. Unfinished Shaker: Unfinished cabinets & vanities have rabbet joint drawer boxes. The drawer box will be screwed together with 1" Flat Head screws. Charleston Coffee Glaze: Coffee Glaze cabinets & vanities do not have Drawer Glide Releases. Instead, set drawer box onto glide pegs and secure with 1/2" Flat Head screws. Shaker Espresso: Espresso cabinets & vanities have full extension side mount drawer glides. They attach by screwing directly to the drawer box sides. Appalachian Oak & Glossy White: Appalachian Oak cabinets & vanities and Glossy White vanities have rabbet joint drawer boxes. The drawer box will be screwed together with 1" Flat Head screws. AO & GW also have epoxy coated drawer glides. They attach by screwing directly to the drawer box sides.	
STEP 1: Attach drawer box sides to drawer front. A rubber mallet can be used to gently tap the drawer sides fully into the drawer front. 		STEP 2: Insert drawer bottom into grooves on drawer box sides and drawer front. 	STEP 3: Attach drawer box back. A rubber mallet can be used to gently tap the drawer sides fully into the drawer back. 