



MICROWAVE WALL CABINET

Assembly Instructions

NOTICE

IMPORTANT! Assemble cabinet on a protected surface to avoid scratching the finish.

TOOLS & SUPPLIES


- Phillips Screwdriver/Drill with Phillips Tip
- Rubber Mallet
- Nail Gun with 1-1/2" Brad Nails **OR** Wood Glue

CABINET PARTS

PART # - DESCRIPTION	PART # - DESCRIPTION
A - Face Frame with Door(s) & Hinges Attached	D - Bottom Panel Shelf
B - Side Panel	E - Back Panel
C - Top/Middle Panel	F - Adjustable Shelf




STEP 1: Place face frame with door side down on protected work surface. Attach brackets to back of face frame with 9/16" Round Head screws.

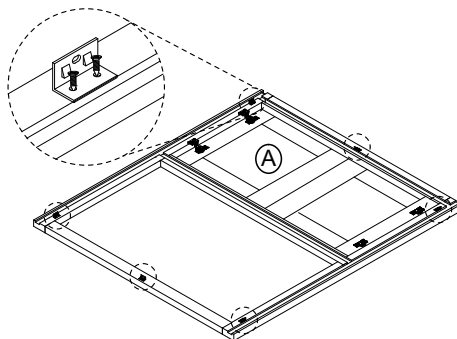


STEP 2: Attach side panels to face frame by lowering side panel brackets over face frame brackets. Insert 9/16" Round Head screw through hole in each bracket to secure.


Tip: You can use a rubber mallet to gently tap brackets and panels into place when needed during assembly.

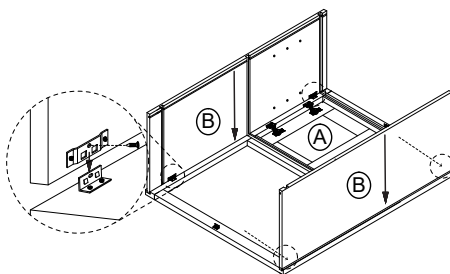


STEP 3: Insert male brackets into female brackets on top and bottom panels, but DO NOT screw into place yet. Slide top, middle, and bottom panels into grooves on side panels and face frame (bottom panel will extend past face frame).

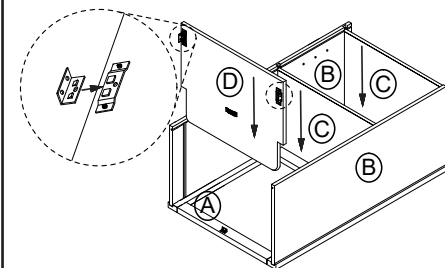



STEP 4: Attach brackets on top and bottom panels to side panels with 9/16" Round Head screws (like Step 1).

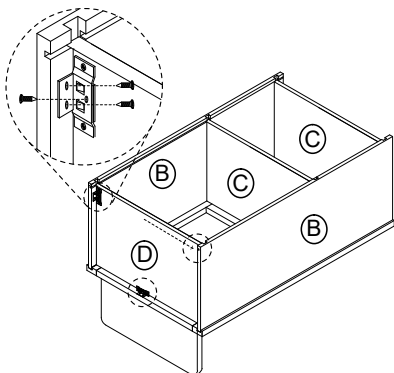

STEP 5: Insert back panel into grooves on side panels and slide into place.

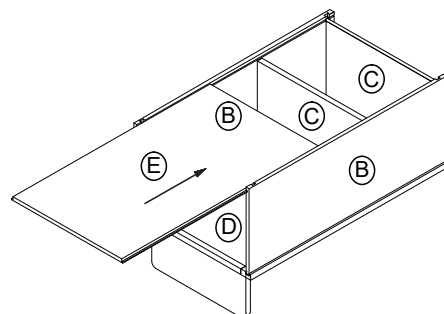


STEP 6: Use 1" flat head screws to secure back panel to top, middle, and bottom panels.

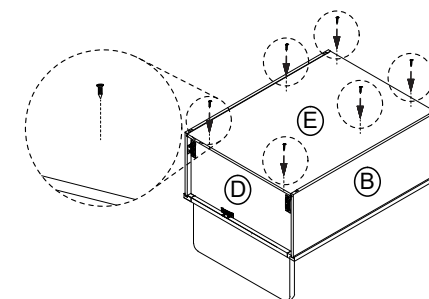

STEP 7: Stand cabinet up. Insert shelf clips into holes on cabinet side panels. Install shelf.

Note: Shelf available in 42" tall cabinet only.

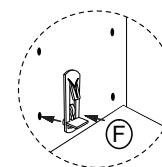



MICROWAVE WALL CABINET

Assembly Instructions






Door
Hinges



Door/Drawer
Bumpers

STEP 8: Adjust door spacing as needed using screws on 6-way adjustable door hinges. Add bumpers to doors.

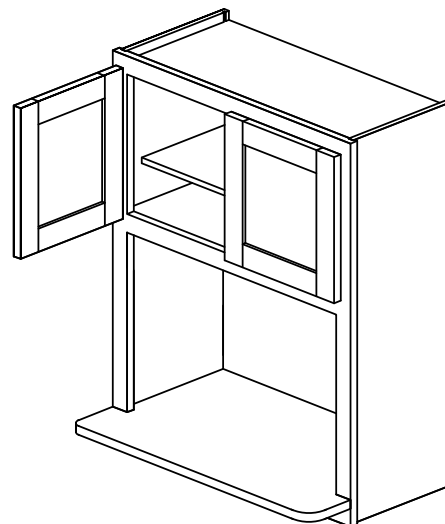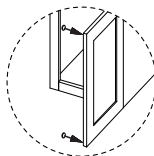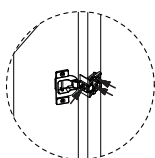

**Shelf configuration may vary based on cabinet size.*